


How to turn on the UConnect System using the StarScan

Page 1 of 7

An informative guide in activating the factory style UConnect feature to be in compliance with the CAN BUS system so the EVIC will display properly.


Step 1:

Connect the Starscan tool to the vehicle as described in the service manual and go to the main menu.

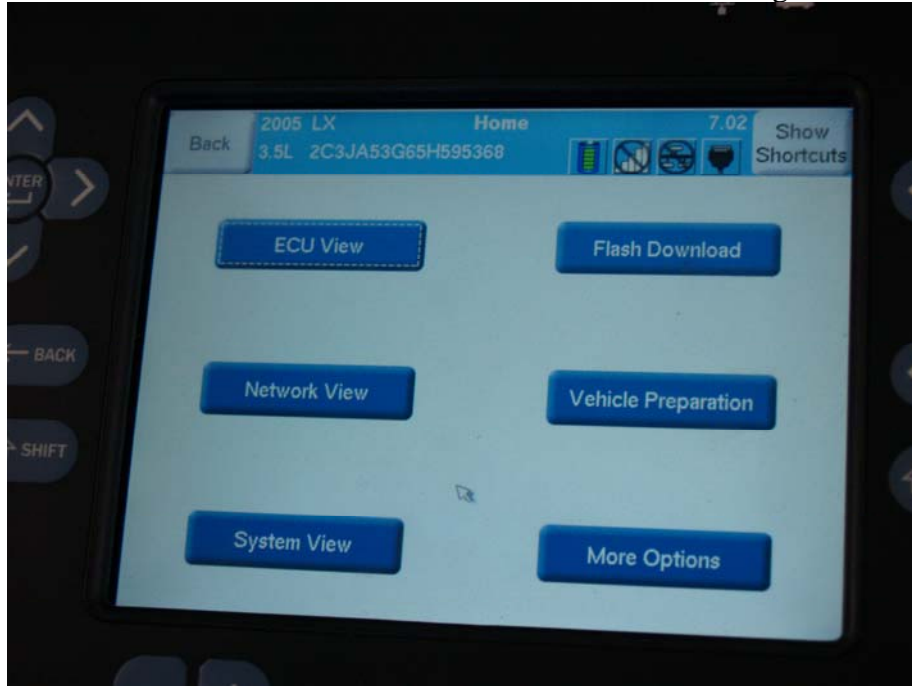

Step 2:


Select the Vehicle Preparation menu.

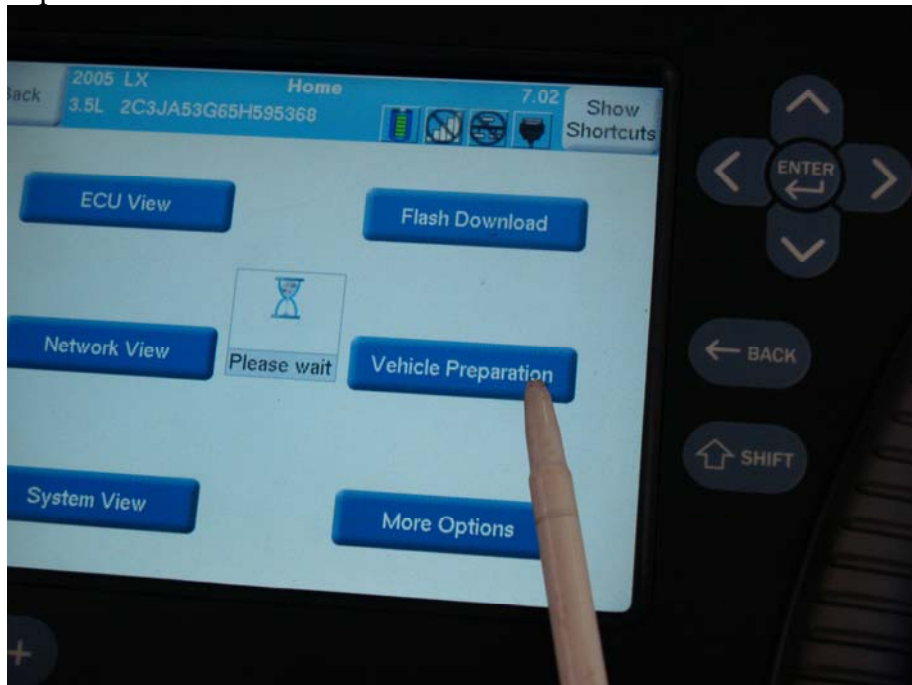

This guide brought to you by Mopar Supercenter – Home of the “Factory UConnect Kit”


Step 3:

Scroll down the list to “Program Network Configuration”.

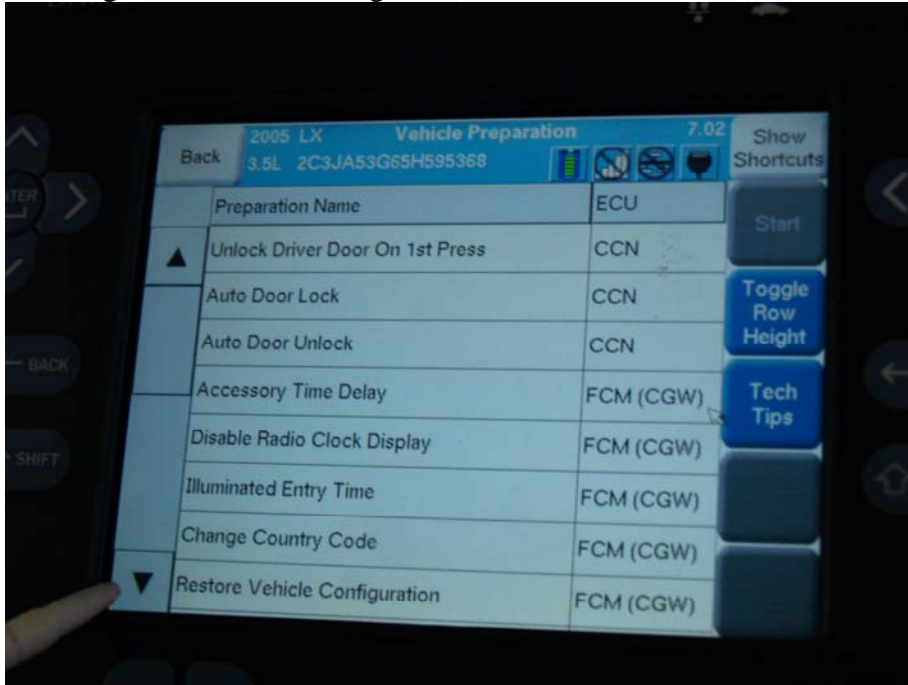


Step 4:

Select “Program Network Configuration” and press “Start”

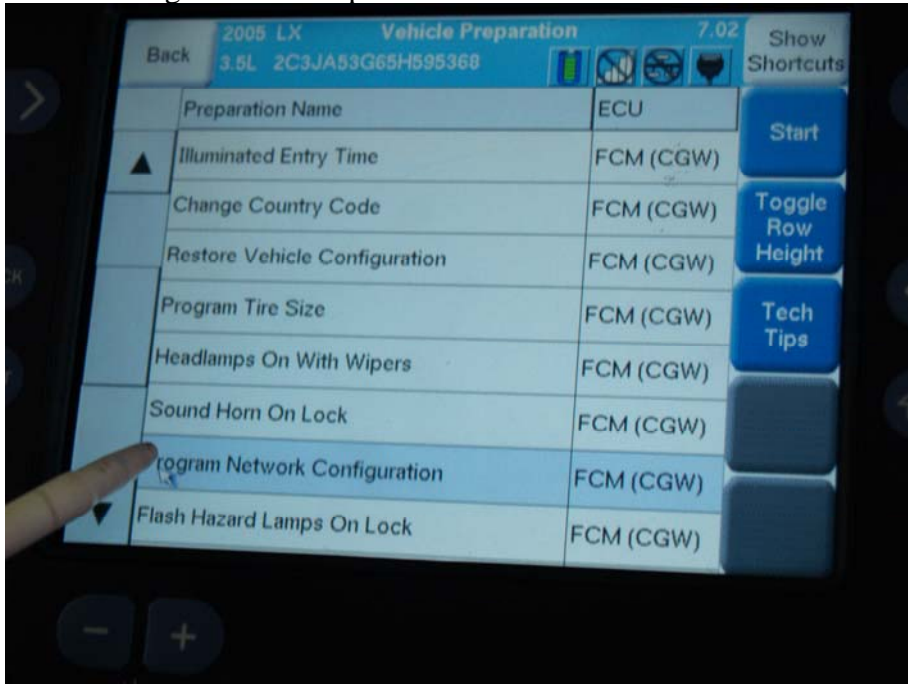


Step 5:

After selecting Program Network Configuration a dialog box opens, click the “Next” button.

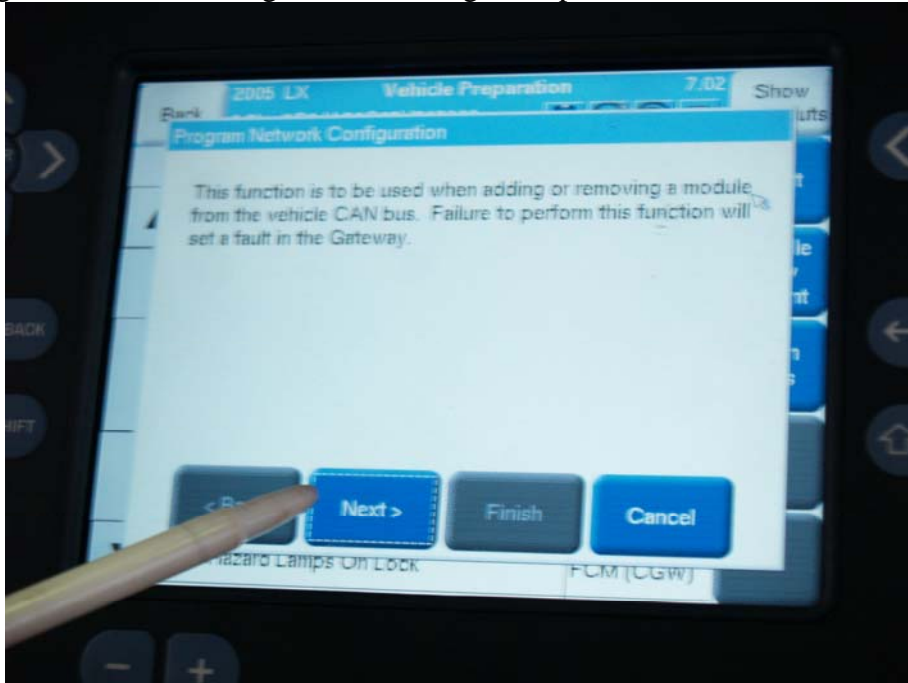


Step 6:

Select the “HFM” under the ECU Column. (Notice under Available column is says “Not Set”)

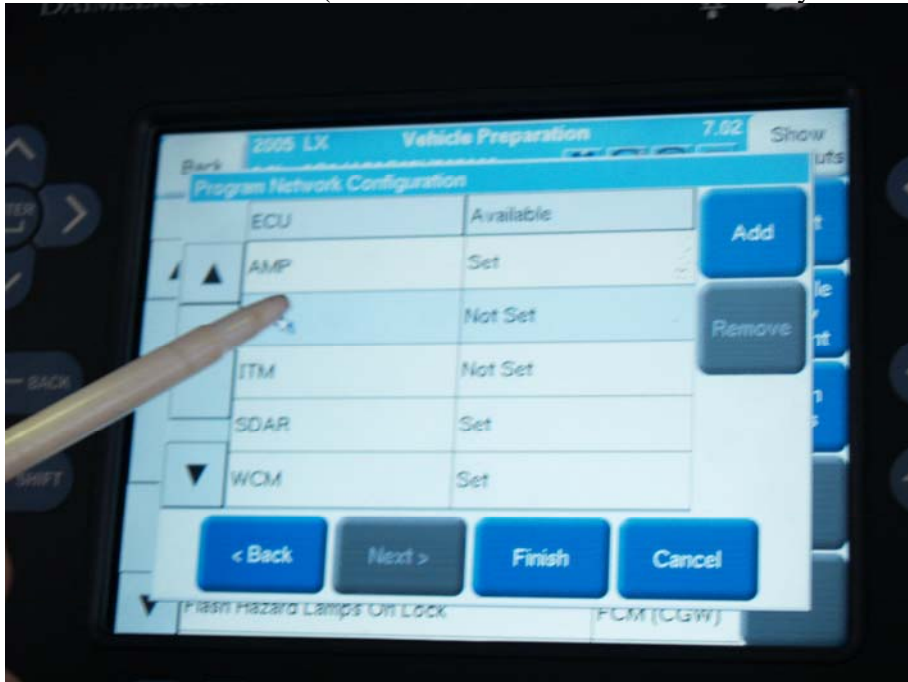


Step 7:

Select the “Add” button in the upper right of the screen.

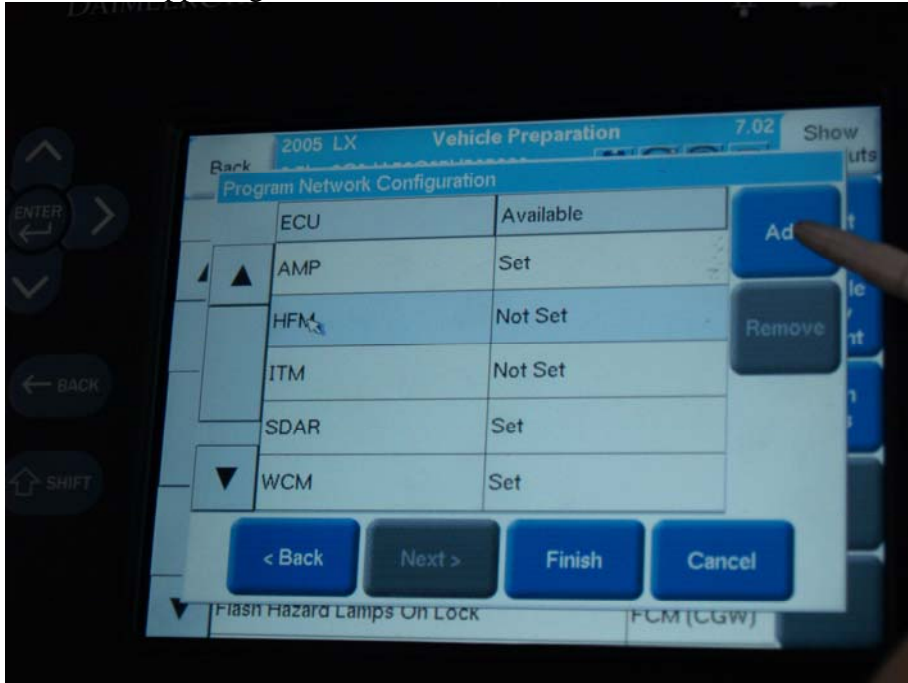


Step 8:

Once it finishes install the HFM (Hands Free Module) another dialog box opens, click “Next”.

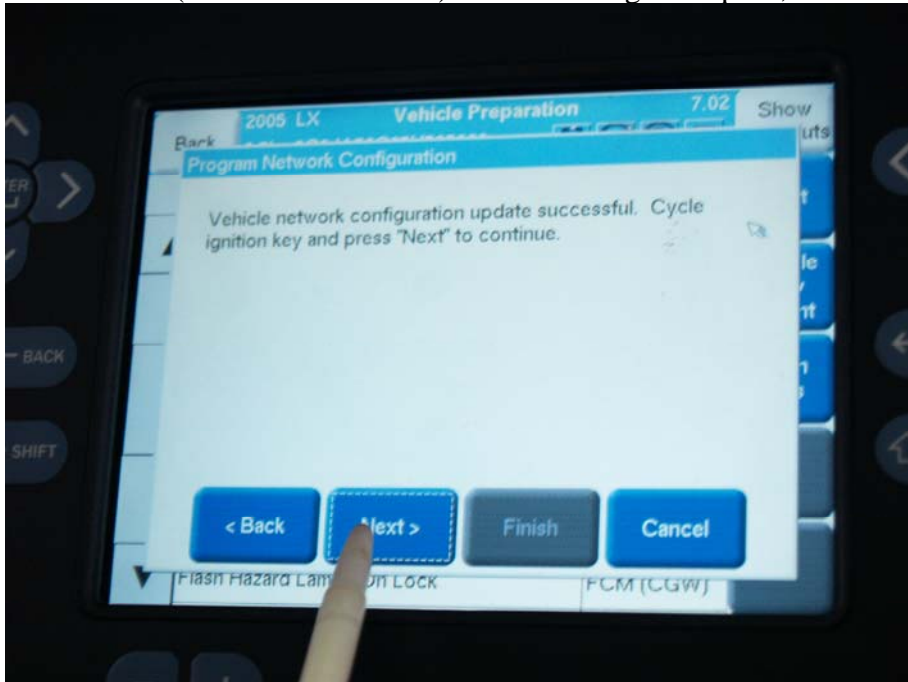


Step 9:

Click the “Finish” button to complete adding the Telematics module to the network and return to vehicle preparation menu.

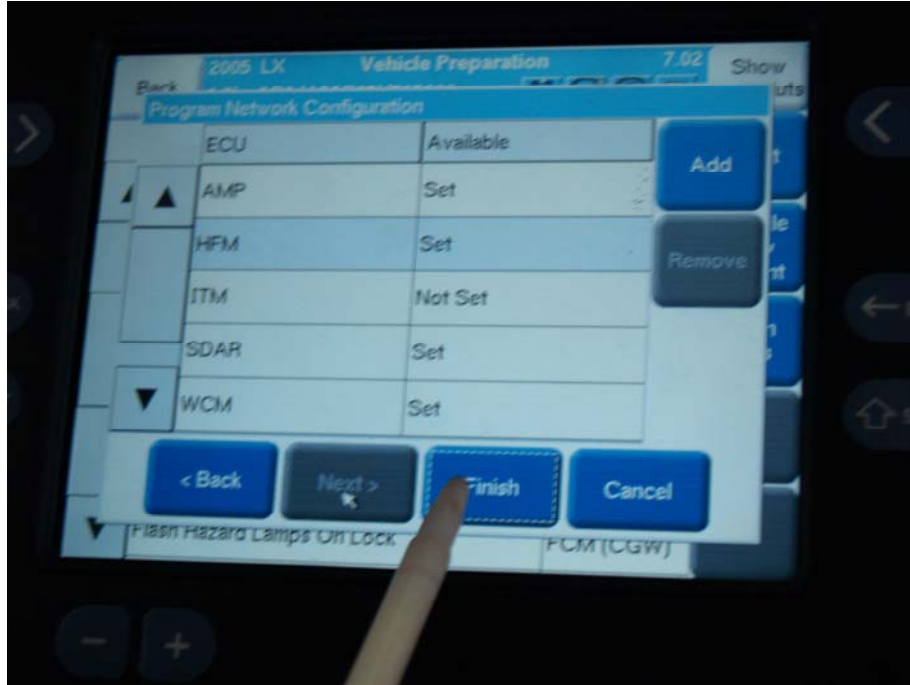


Step 10:


Select “Show Shortcuts”, and then select “Home” to return to the main menu.

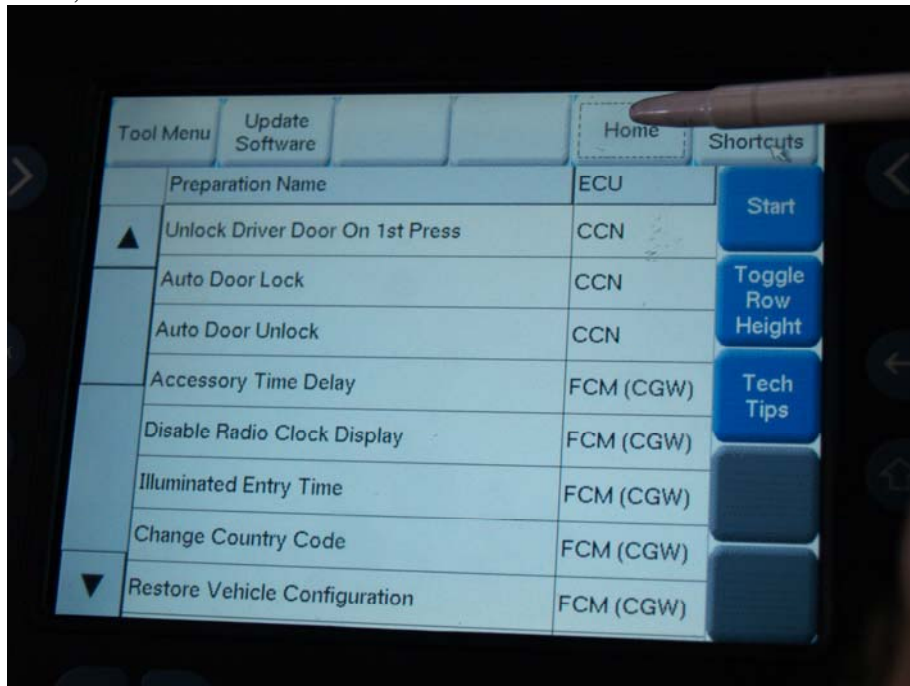

Step 11:
Select “System View”.

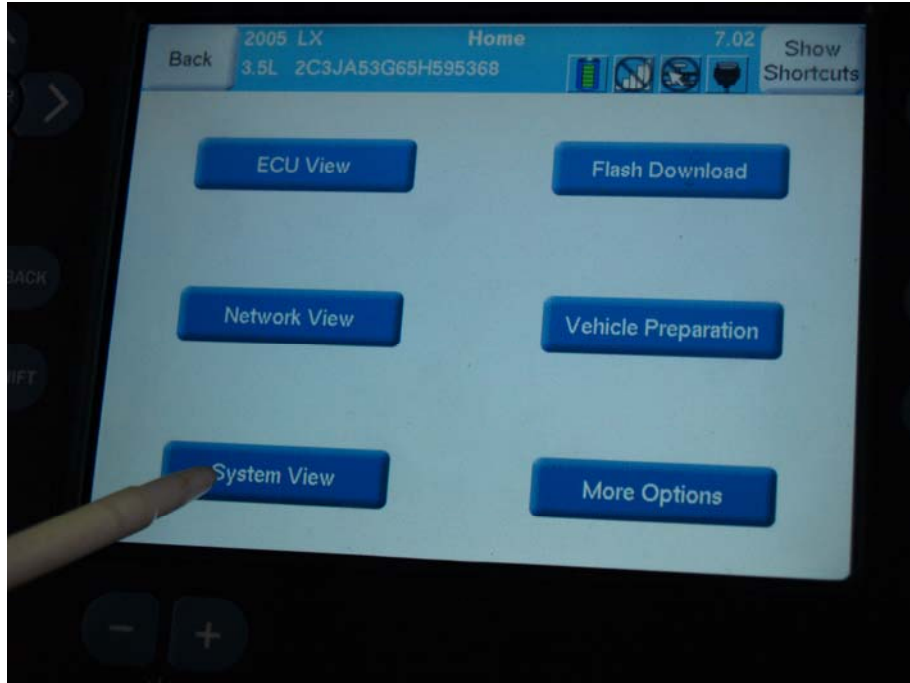


Step 12:
Select “All DTCs” to view stored codes set.

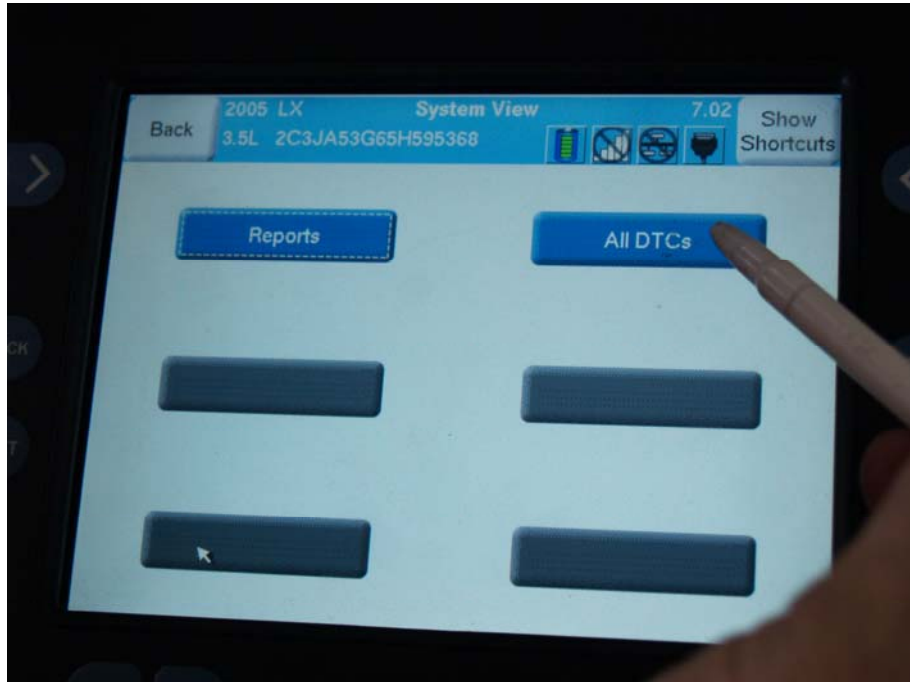


Step 13:

Select “Clear All Stored DTCs”

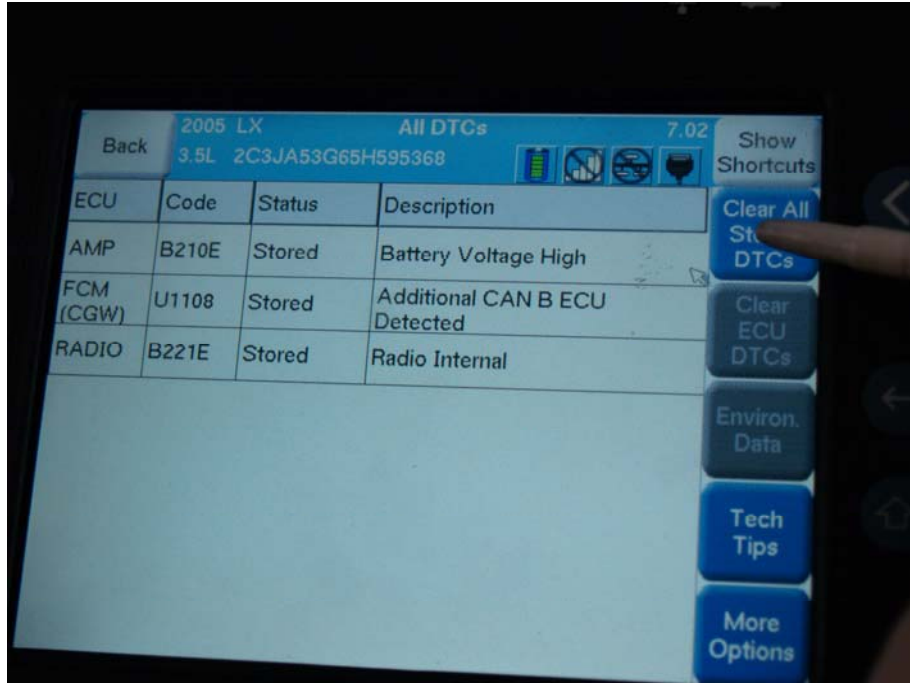

Step 14:

Select “Yes” from the confirmation dialog box that opens up.

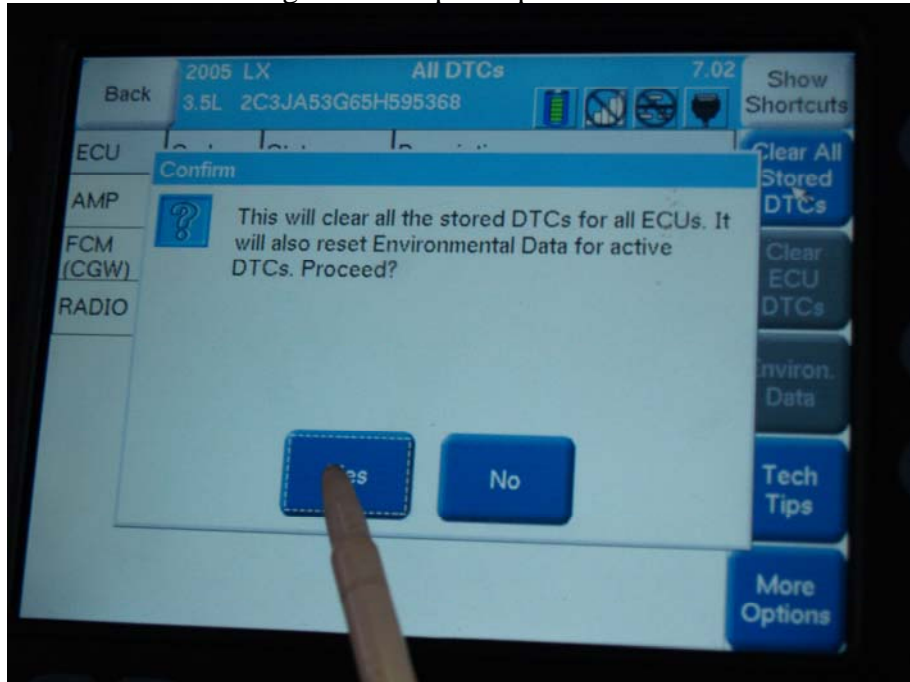

Step 15:

You can now disconnect the Starscan as per the service manual instructions.